

BASE CABINET
NOT INCLUDED

BASE CABINET
NOT INCLUDED

enomatic®
wine serving systems

TITLE:
**ENOROUND 16 BOTTLE ELITE
8+8**

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
<INSERT COMPANY NAME HERE>. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
<INSERT COMPANY NAME HERE> IS
PROHIBITED.



02	DIMENS. INCHES ADDED	13/07/2011	PANICHI		
01	ISSUE	19/11/2010	G. GAGLI		
REV.	DESCRIPTION	DATE	EXECUTOR	CHK'D	APPV'D
CODE:	MATERIAL:		MATERIAL CODE:		WEIGHT Kg:
-----	---				---

DWG NO.	ER2-YMOTA		A3
SCALE:1:10	LANGUAGE: ENGLISH	FINISH:	THICKNESS:
SHEET 1 OF 9			



REV.	DESCRIPTION	DATE	EXECUTOR	CHK'D	APP'VD
E	CODE:	MATERIAL:		MATERIAL CODE:	WEIGHT Kg
	000 000 000 000 000 000 000 000 000 000 000	000 000 000			000 000

INSTALLATION EXAMPLE

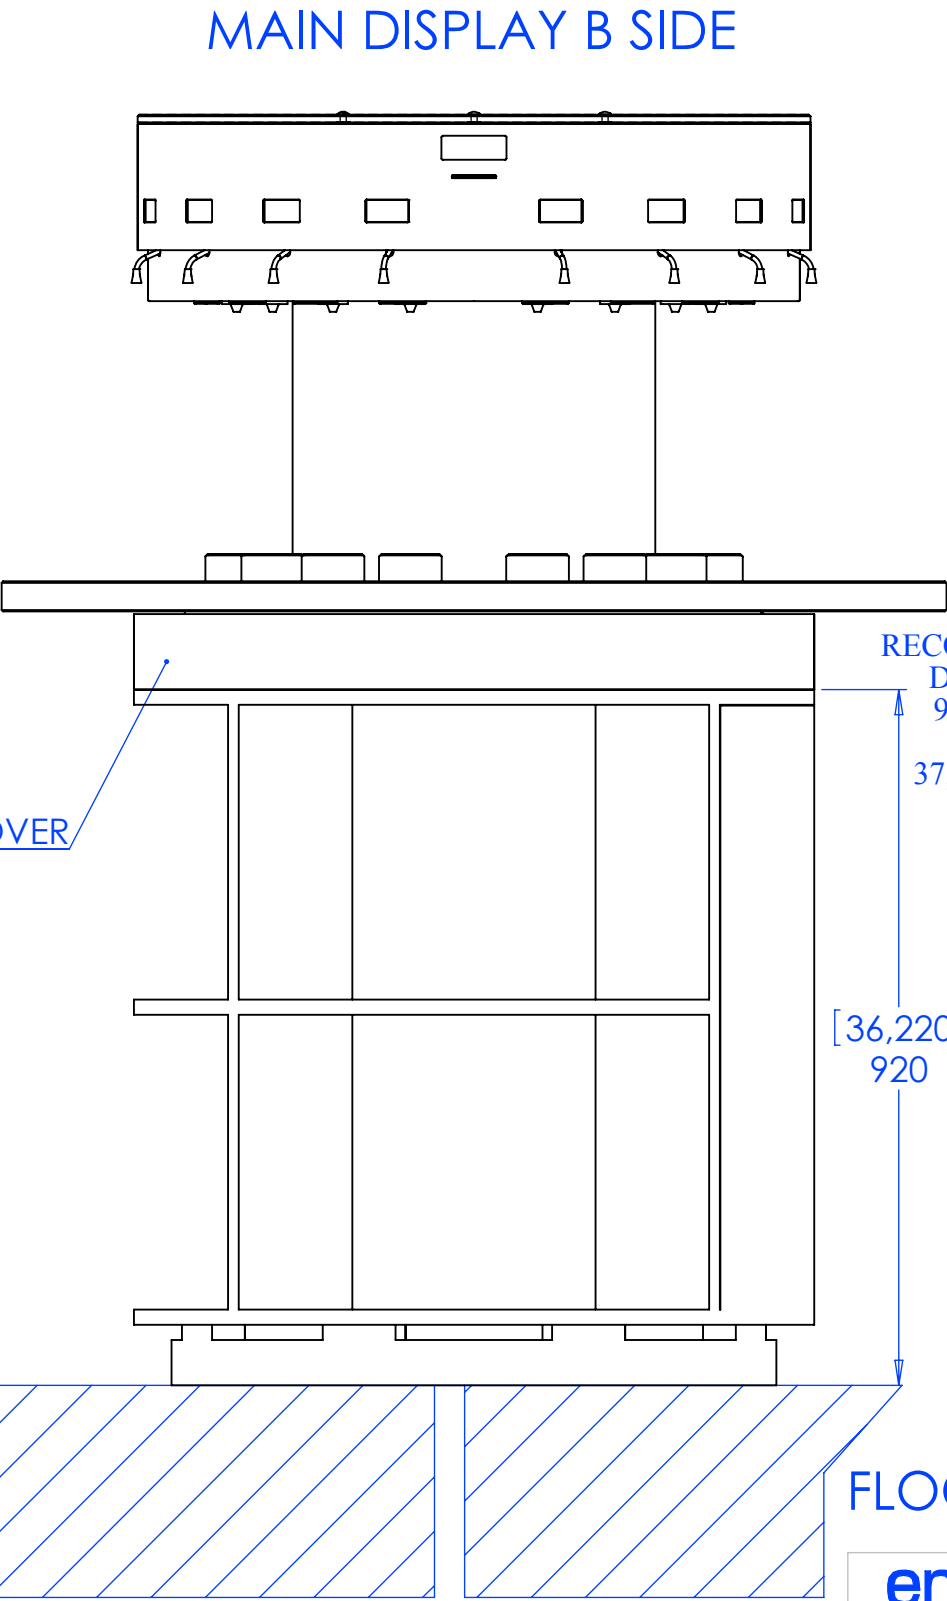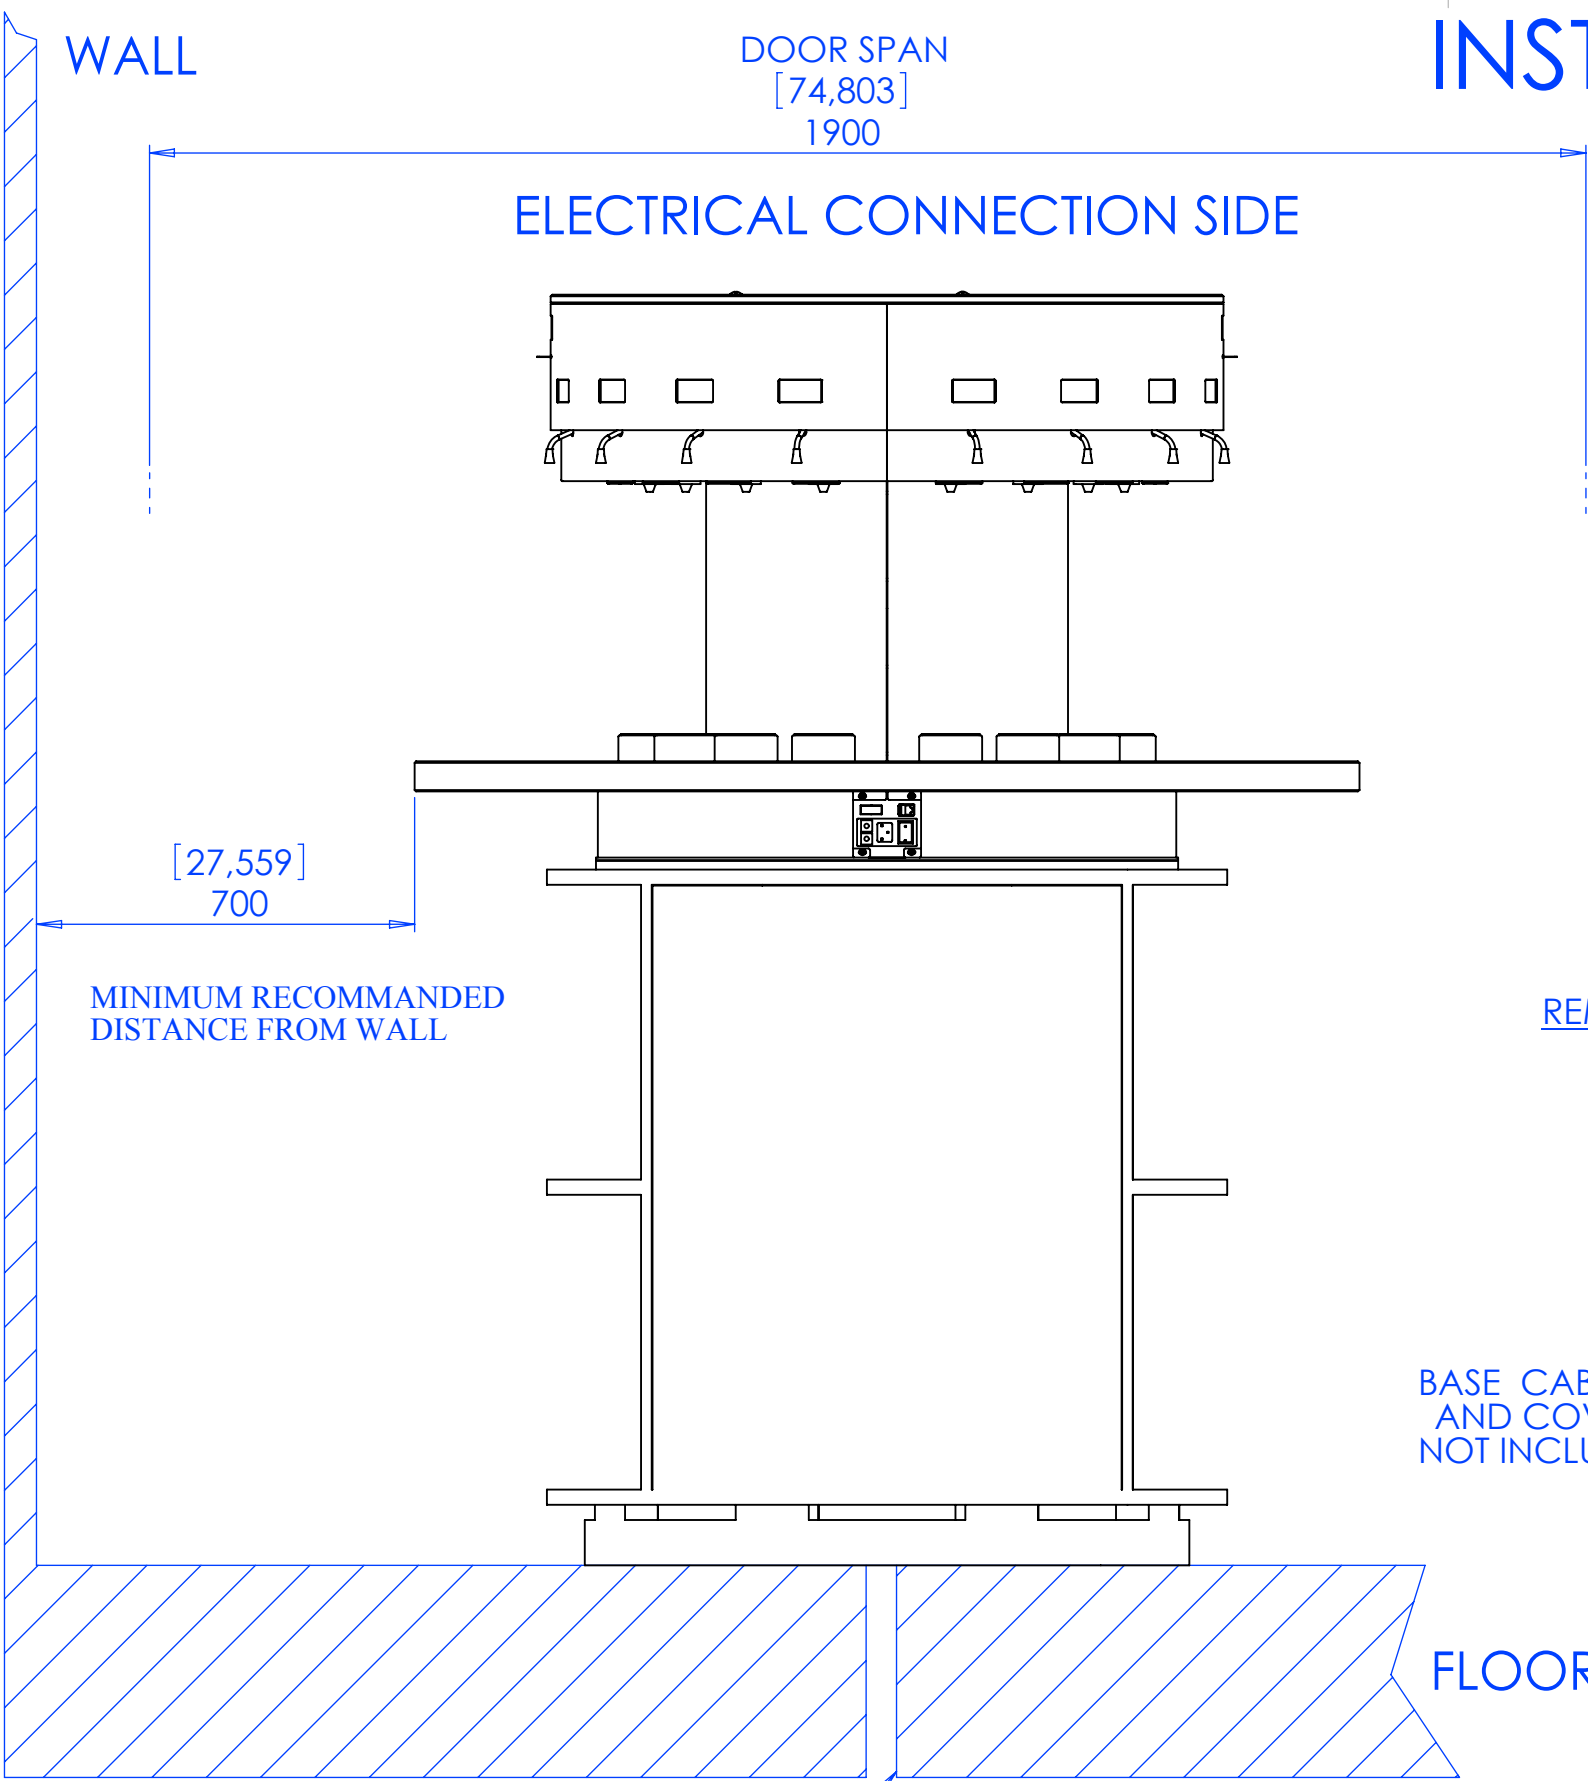

DUCT FOR ELECTRICAL WIRE POWER SUPPLY
AND EVENTUAL NITROGEN TUBE CONNECTION

MIN [1,575]
Ø 40

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
<INSERT COMPANY NAME HERE>. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
<INSERT COMPANY NAME HERE> IS
PROHIBITED.

REV.	DESCRIPTION	DATE	EXECUTOR	CHK'D	APPV'D
CODE:	MATERIAL:			MATERIAL CODE:	WEIGHT Kg:
-----	---			---	---

TITLE:

ENOROUND 16 BOTTLE ELITE
8+8

DWG NO.

ER2-YMOTA

SCALE:1:10

LANGUAGE: ENGLISH

FINISH:

THICKNESS:


A3

SHEET 3 OF 9



HANDLING INSTRUCTION

USE CERTIFIED LIFTING EQUIPMENT ONLY
DO NOT MANUALLY MOVE THE MACHINE

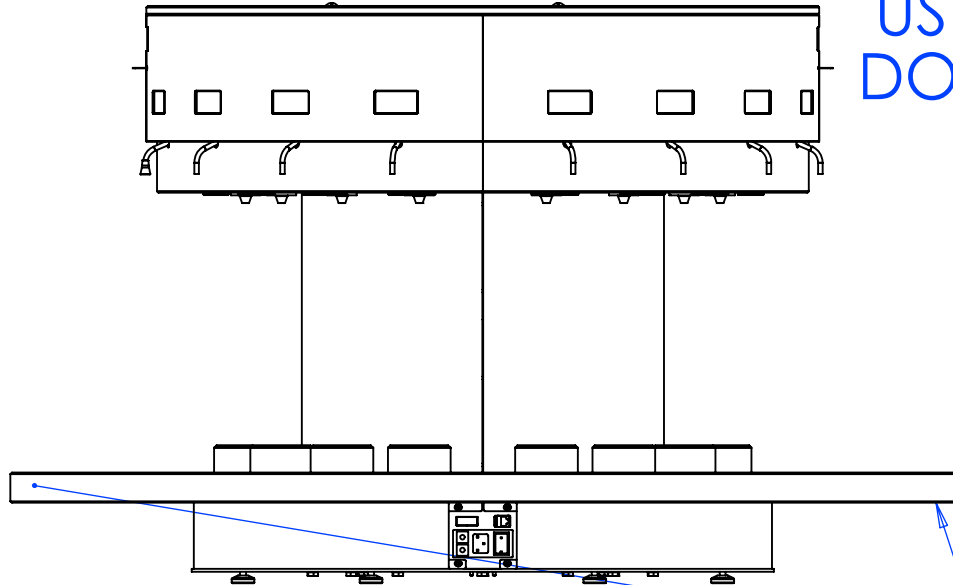


WARNING!!!
DO NOT LIFT THE MACHINE
FROM HERE

NEVER EXCEED MAX. ALLOWED LIFTING ROPE TILT

LIFT WITH HOOKS AND ROPE


N°4 ROPE
(NOT PROVIDED)

0°-30°


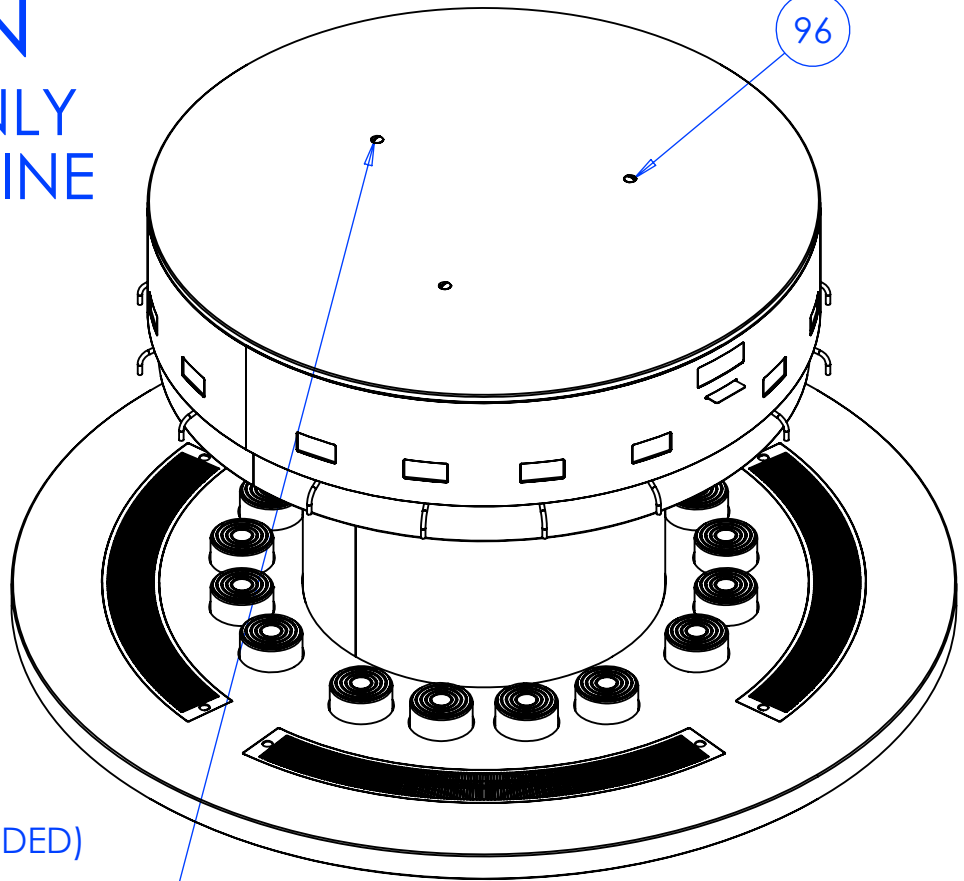


REMOVE UPPER COVER UNSCREWING
N°3 (111) TO ACCESS N°4 HEYBOLTS

N°4 HEYBOLTS M10

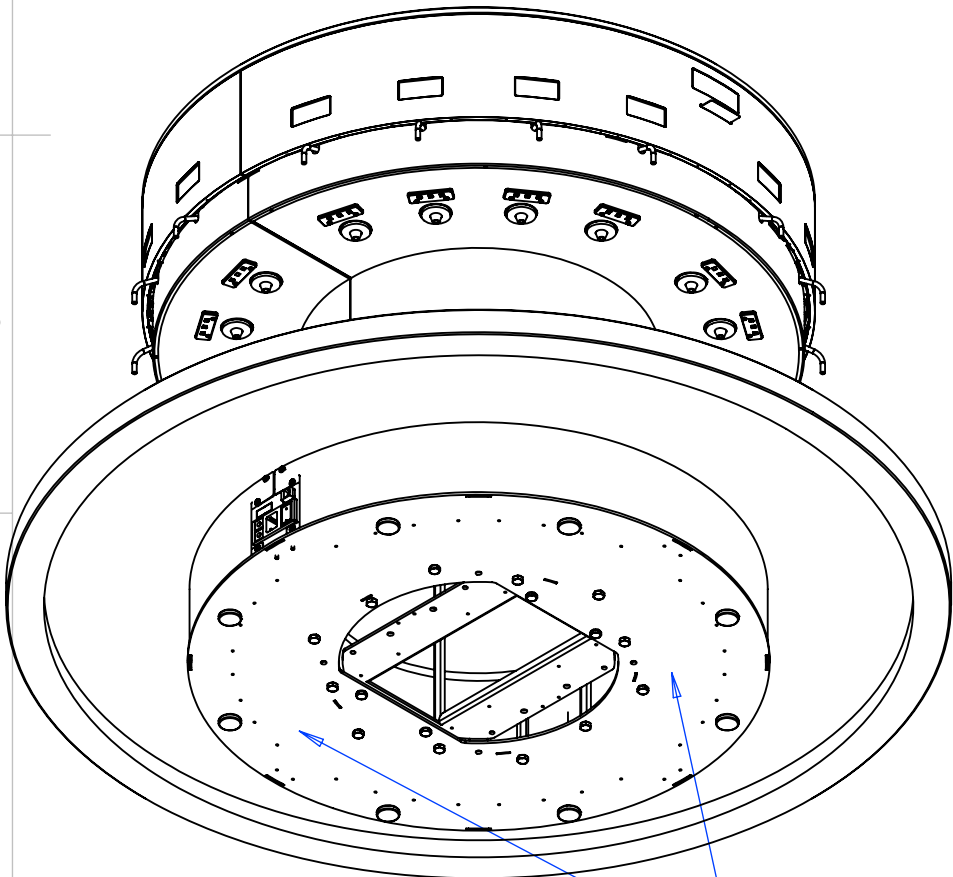

LIFT THE MACHINE FROM THIS SURFACE

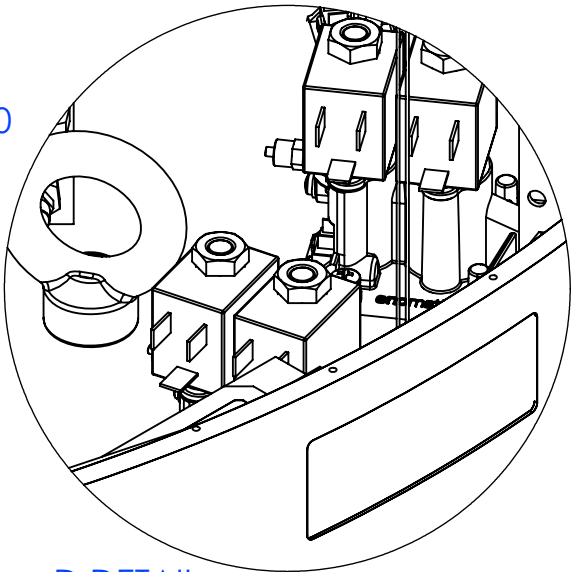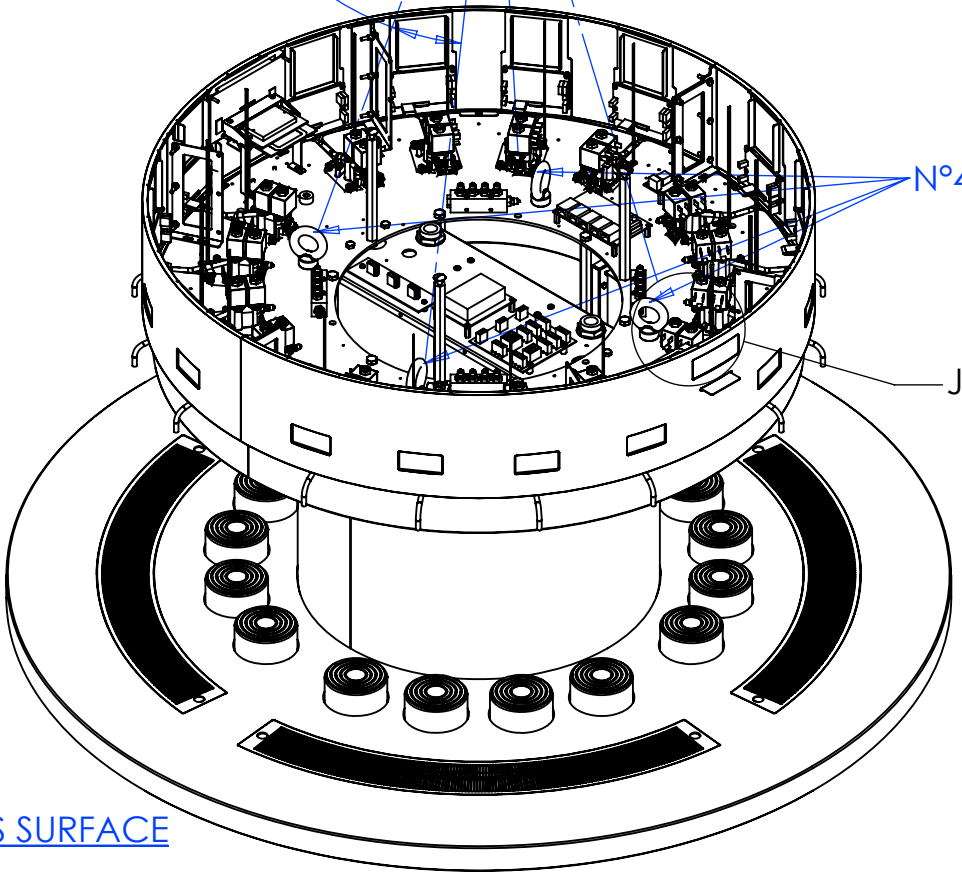

D DETAIL
SCALE 1 : 2
HEYBOLT

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
<INSERT COMPANY NAME HERE>. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
<INSERT COMPANY NAME HERE> IS
PROHIBITED.

REV.	DESCRIPTION	DATE	EXECUTOR	CHK'D	APPV'D
CODE:	MATERIAL:			MATERIAL CODE:	WEIGHT Kg:
-----	---			---	---

enomatic®
wine serving systems

TITLE:	
ENOROUND 16 BOTTLE ELITE 8+8	
DWG NO.	A3
ER2-YMOTA	
SCALE:1:10	LANGUAGE: ENGLISH
FINISH:	THICKNESS:
SHEET 4 OF 9	

INSTALLATION EXAMPLE

ELECTRICAL CONNECTION SIDE

ADJUST to 15mm
N° 6 RUBBER FEET
IF MACHINE IS INSTALLED
ON BASE cod.6550

N°2 COVERS
NOT INCLUDED

B DETAIL
SCALE 1 : 2

REMOVE COVER
FOR POWER
CONNECTION

SEAL AFTER
INSTALLATION

[35,433]
900

Minimum reccomended
size base cabinet

BASE CABINET
NOT INCLUDED

IMPORTANT
DO NOT OBSTRUCT
THE GAP

[18,898]
Ø 480
NITROGEN GAS PIPE
DIAMETER RANGE Ø 400-480

[5,315]
Ø 135
NECESSARY
DIAMETER
FOR ELECTRICAL
POWER CONNECTION
AND LAN CONNECTION

[1,417]
36

[0,591]
15

[0,118]
3

COUNTERBORE
FOR RUBBER FEET
RESPECT PROVIDED
DIMENSION

[35,433] BASE CABINET
Ø 900
NOT INCLUDED

EXAMPLE TYPICAL
BASE CABINET
DIMENSION

enomatic®
wine serving systems

TITLE:
ENOROUND 16 BOTTLE ELITE
8+8



DWG NO. ER2-YMOTA A3
SCALE:1:10 LANGUAGE: ENGLISH FINISH: THICKNESS: SHEET 5 OF 9

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
<INSERT COMPANY NAME HERE>. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
<INSERT COMPANY NAME HERE> IS
PROHIBITED.


REV.	DESCRIPTION	DATE	EXECUTOR	CHK'D	APPV'D
CODE:	MATERIAL:			MATERIAL CODE:	WEIGHT Kg:
-----	---				---

INSTALLATION EXAMPLE

ELECTRICAL CONNECTION SIDE

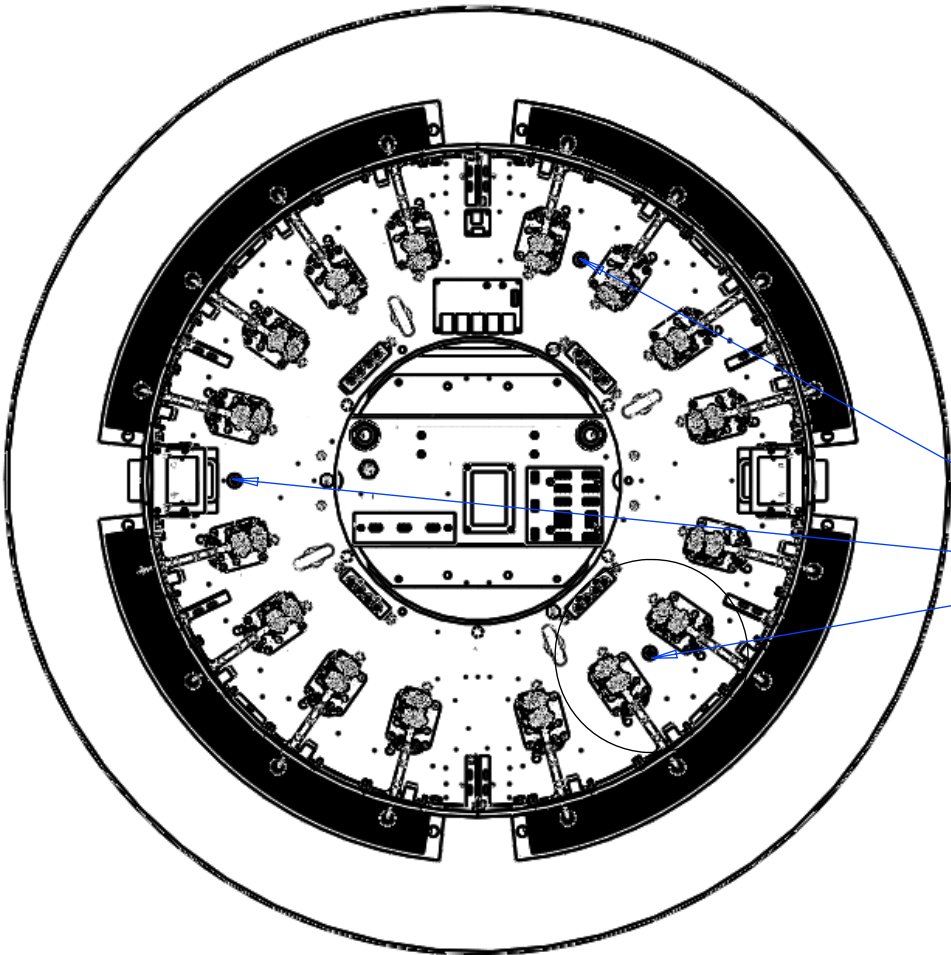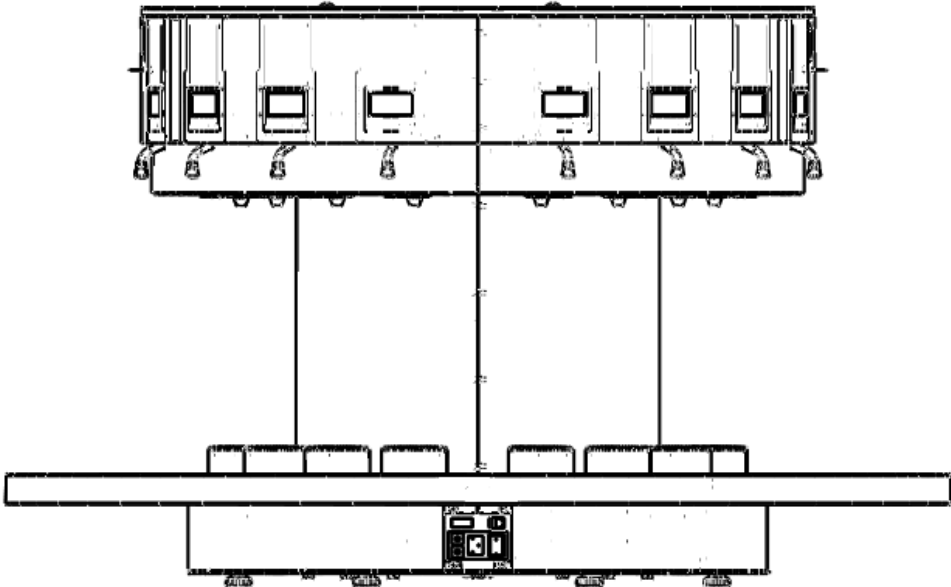

UP SIDE

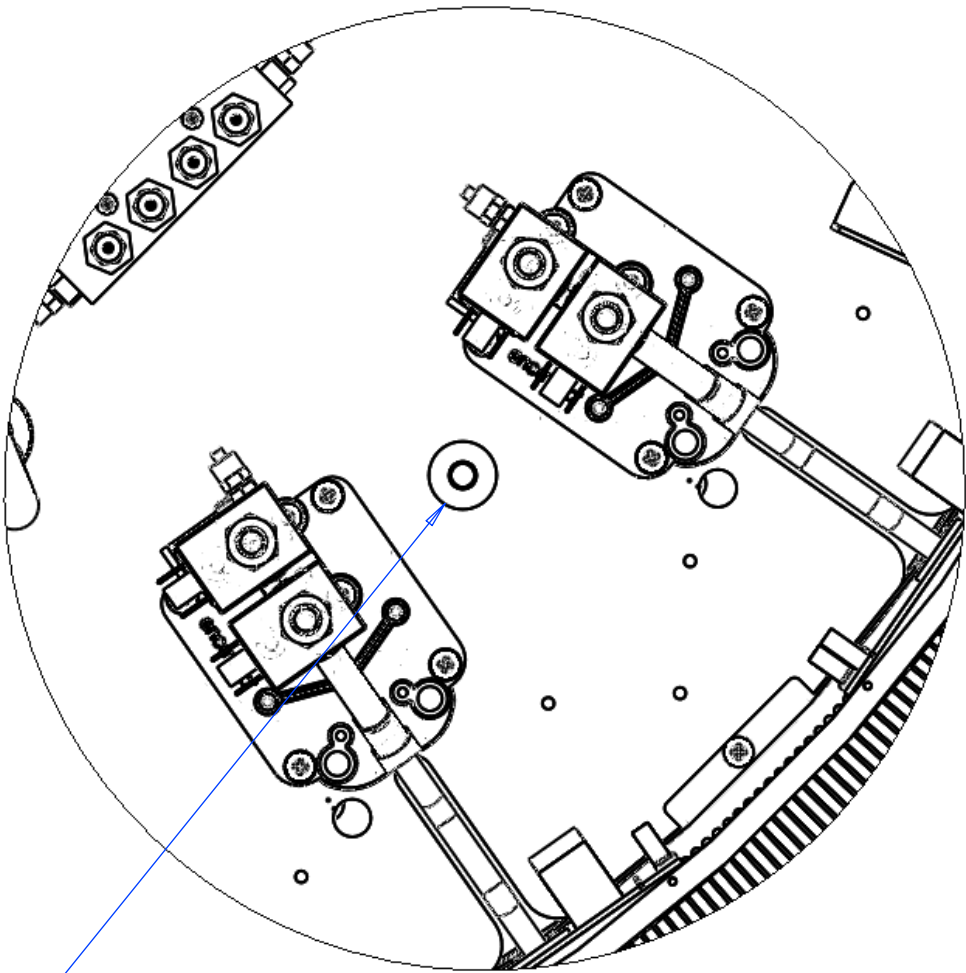

DETTAGLIO S
SCALA 1 : 2

USE PROVIDED SPIRIT LEVEL
TO ADJUST CORRECT
DISPENSER STANCE

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
<INSERT COMPANY NAME HERE>. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
<INSERT COMPANY NAME HERE> IS
PROHIBITED.

REV.	DESCRIPTION	DATE	EXECUTOR	CHK'D	APPV'D
CODE:	MATERIAL:			MATERIAL CODE:	WEIGHT Kg:
-----	---			---	---

TITLE:

ENOROUND 16 BOTTLE ELITE
8+8

DWG NO.

ER2-YMOTA

SCALE:1:10

LANGUAGE: ENGLISH

FINISH:

THICKNESS:

A3


SHEET 6 OF 9

1 2 3 4 5 6 7 8

CONNECTION POWER AND NITROGEN GAS

A


ELECTRICAL CONNECTION SIDE

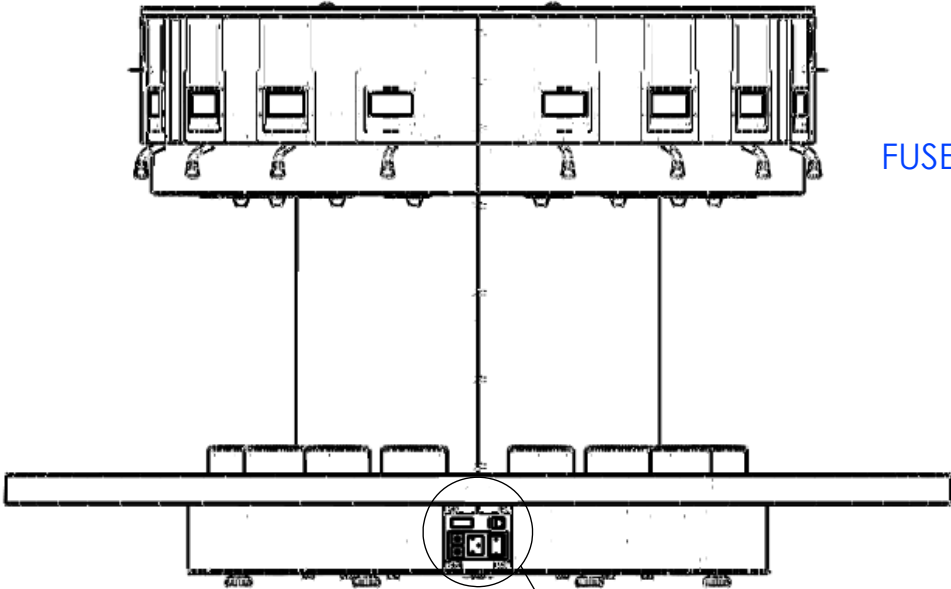

D DETAIL
SCALE 1 : 2


LAN CONNECTION

FUSES

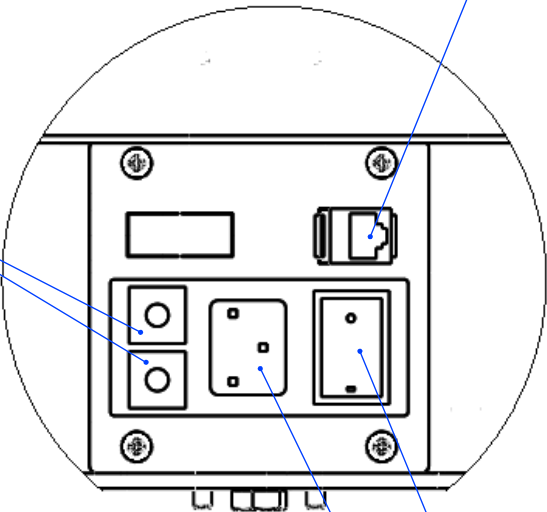


MAIN SWITCH

POWER CONNECTION

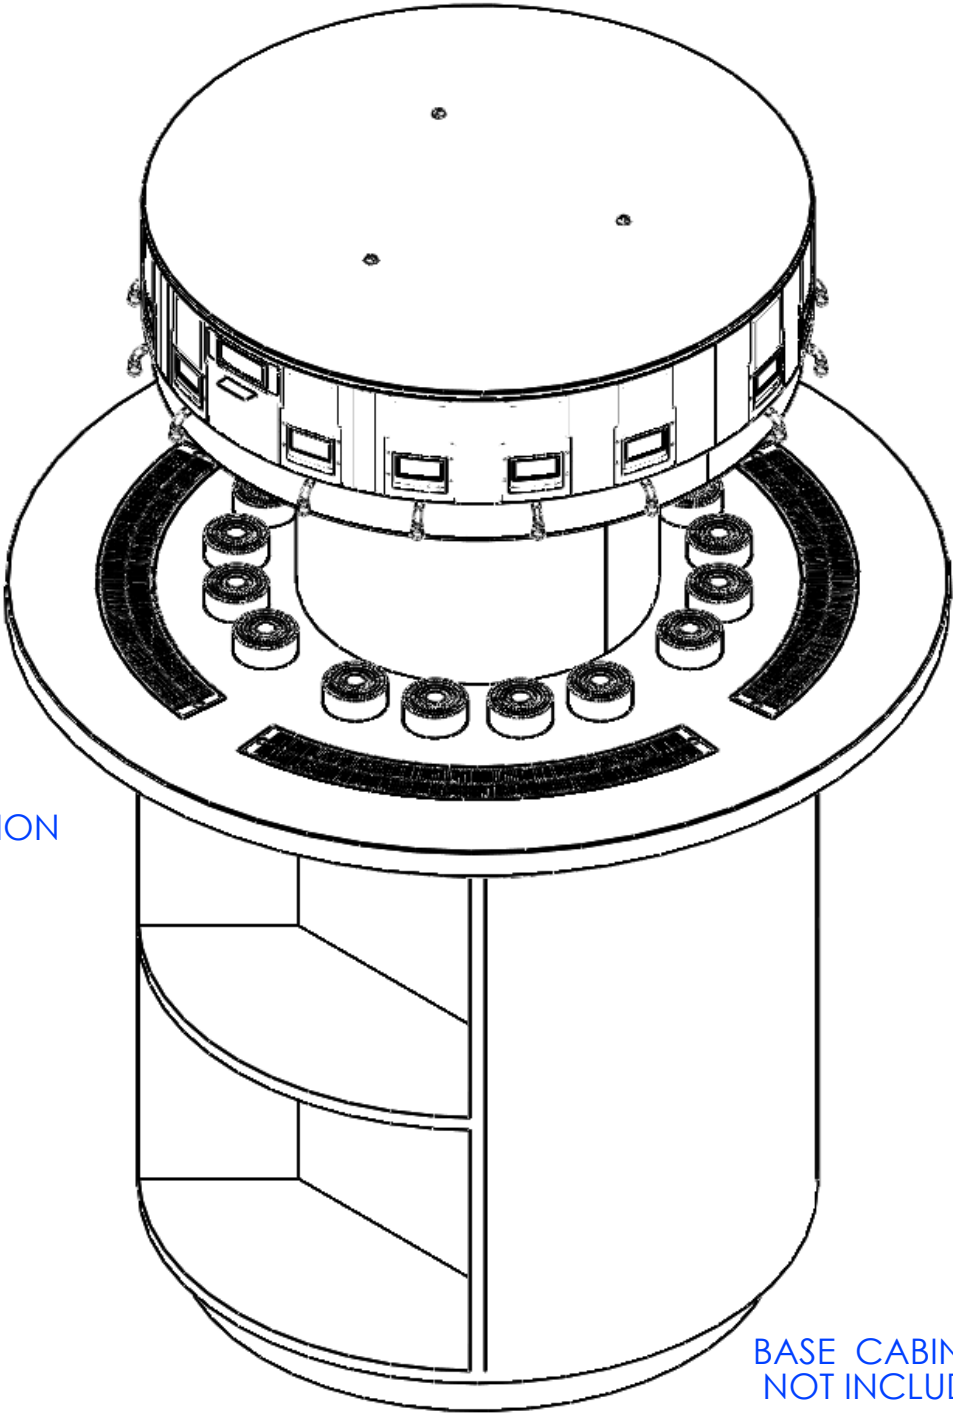


BASE CABINET
NOT INCLUDED

L DETAIL
SCALE 1 : 2

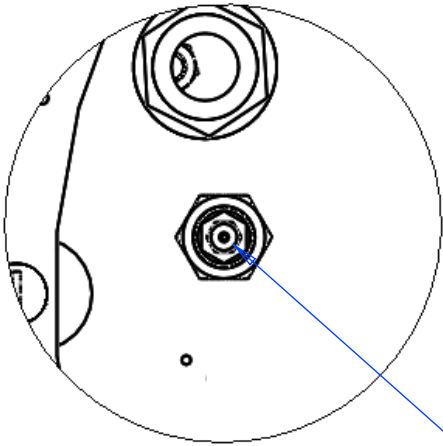

NITROGEN OR ARGON GAS CONNECTION
PRESSURE 160mBar
TUBE Ø 4 mm

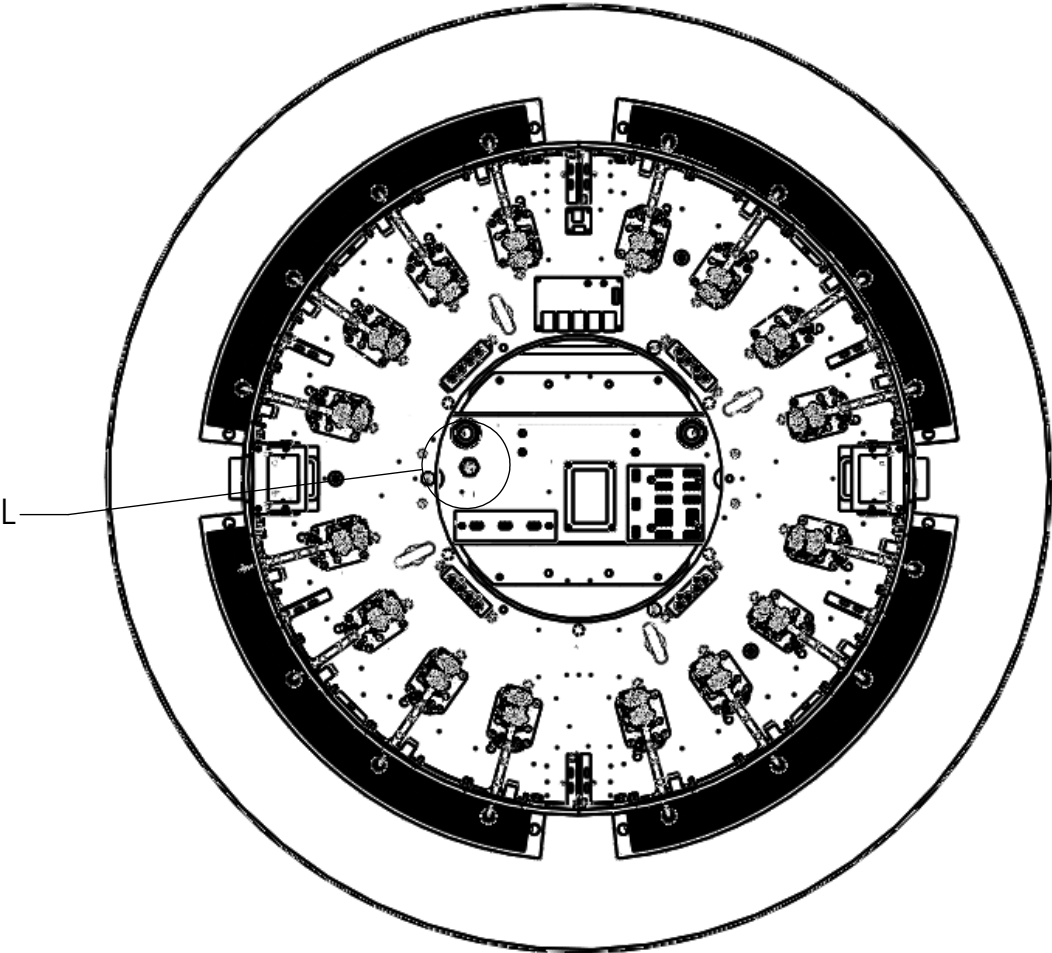

UP SIDE

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
<INSERT COMPANY NAME HERE>. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
<INSERT COMPANY NAME HERE> IS
PROHIBITED.

REV.	DESCRIPTION	DATE	EXECUTOR	CHK'D	APPV'D
CODE:	MATERIAL:			MATERIAL CODE:	WEIGHT Kg:
-----	---			---	---

enomatic®
wine serving systems

TITLE:
ENOROUND 16 BOTTLE ELITE
8+8

DWG NO.
ER2-YMOTA

A3

1

2

3

4

5

6

7

8

A

B

C


D

E

F

General Grid			
ENOROUND 16 BOTTLES ELITE 8+8			
SIZE	HEIGHT (MIN -MAX)	762-767 mm	30 - 30,197 inches
	UPPER DIAMETER	890 mm	35,039 inches
	LOWER DIAMETER	1250 mm	49,213 inches
WEIGHT (Kg)		120	
FINISH MATERIALS		STAINLESS STEEL 304 AND CORIAN	
ELETRICAL FEATURES	VOLTAGE (V)	110 or 220	
	FREQUENCY (Hz)	50@220V - 60@110V	
	POWER (W)	150	
	FUSES	2X4 Amp @ 220V 2X8 Amp @ 110V	
NITROGEN (OR ARGON) GAS PRESSURE		0.16 BAR	
N° 16 ELECTRIC BOTTLE LIFTERS			
N° 1 ELECTRIC LIFTER	VOLTAGE	24 V DC	
	NOMINAL CURRENT	1 Amp	
	MAX CURRENT	2.2 Amp	
FITTABLE BOTTLE DIMENSION	HEIGHT	280÷360 mm	11,024÷14,173
	Ø MAX	110 (160 STAGGERED)	4,331 (4,646 STAGGEDRED) inches

BASE CABINET
NOT INCLUDED

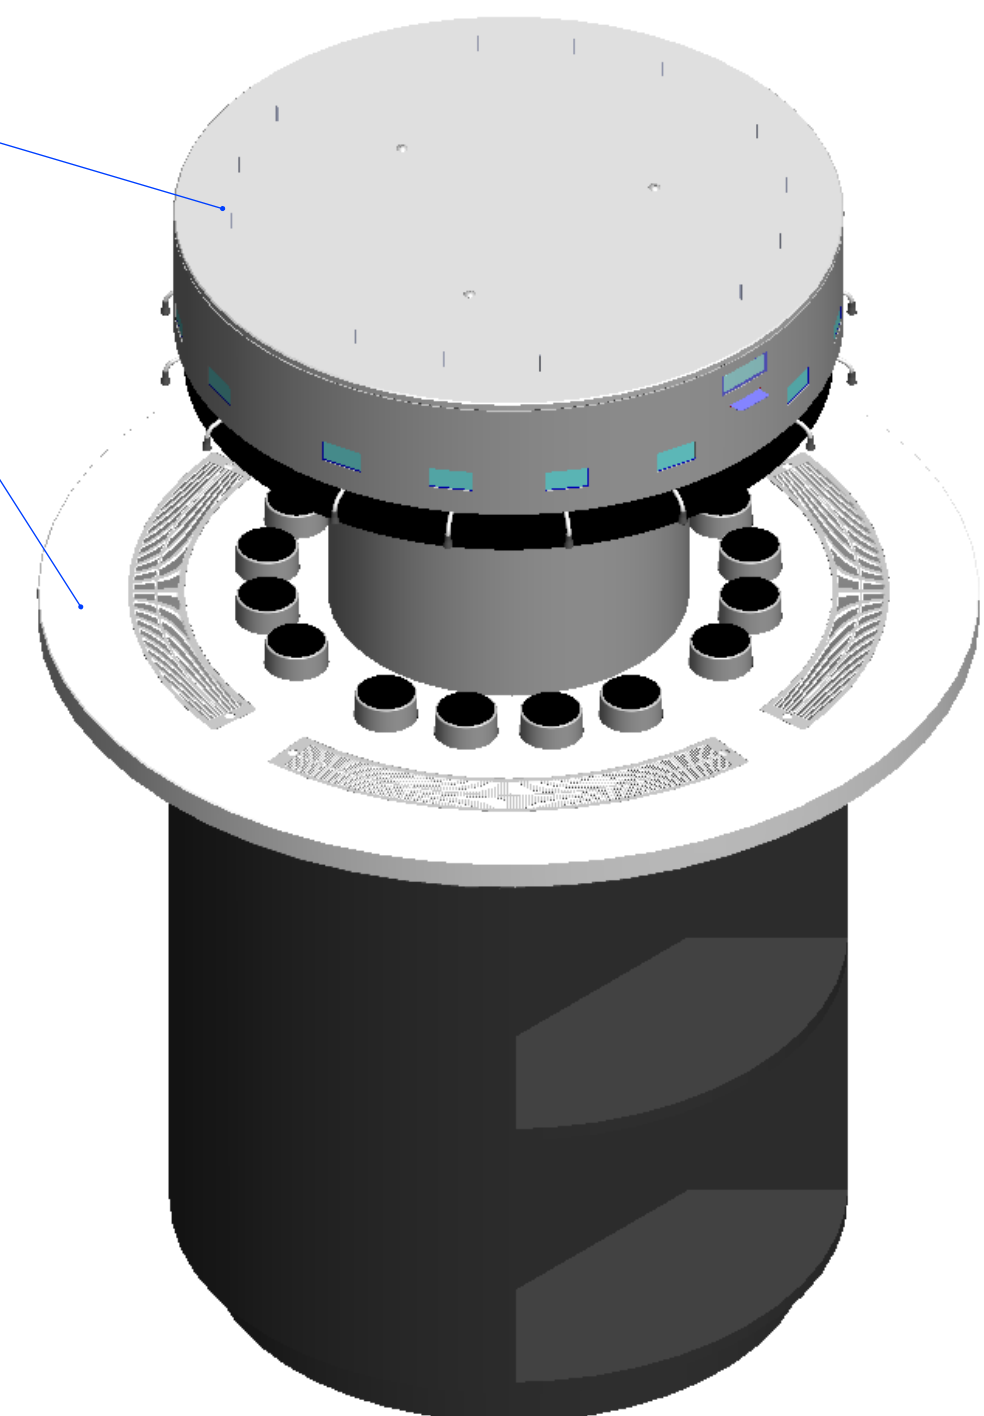

enomatic®
wine serving systems

TITLE:

ENOROUND 16 BOTTLE ELITE
8+8

DWG NO.

ER2-YMOTA

A3

SCALE:1:10

LANGUAGE: ENGLISH

FINISH:


THICKNESS:

SHEET 8 OF 9


PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
<INSERT COMPANY NAME HERE>. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
<INSERT COMPANY NAME HERE> IS
PROHIBITED.

REV.	DESCRIPTION	DATE	EXECUTOR	CHK'D	APPV'D
CODE:	MATERIAL:		MATERIAL CODE:	WEIGHT Kg:	
-----	---			---	


ENOROUND 16 BOTTLE ELITE 8+8CUSTOM CONFIGURATION

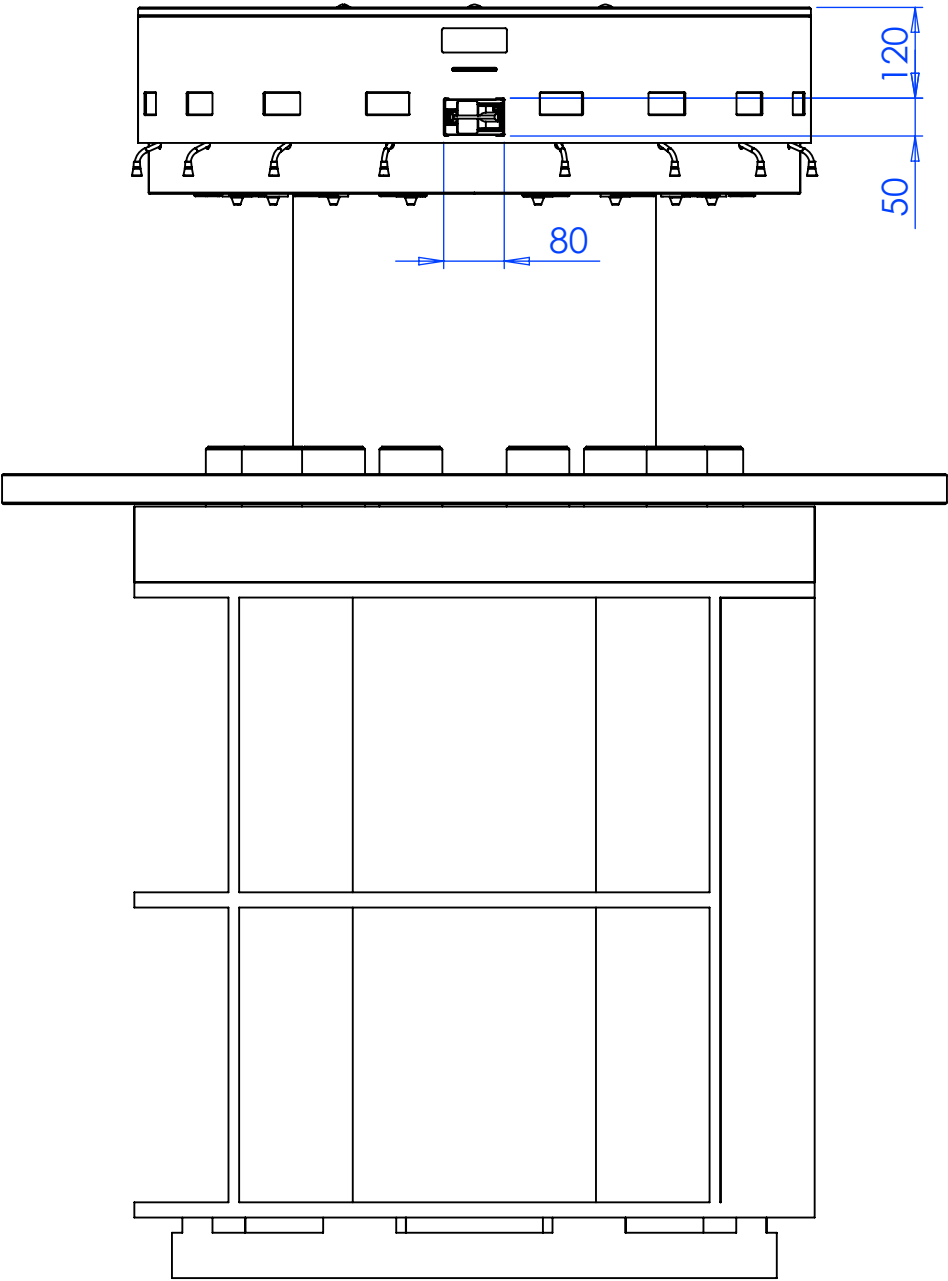

MAGNETIC READER

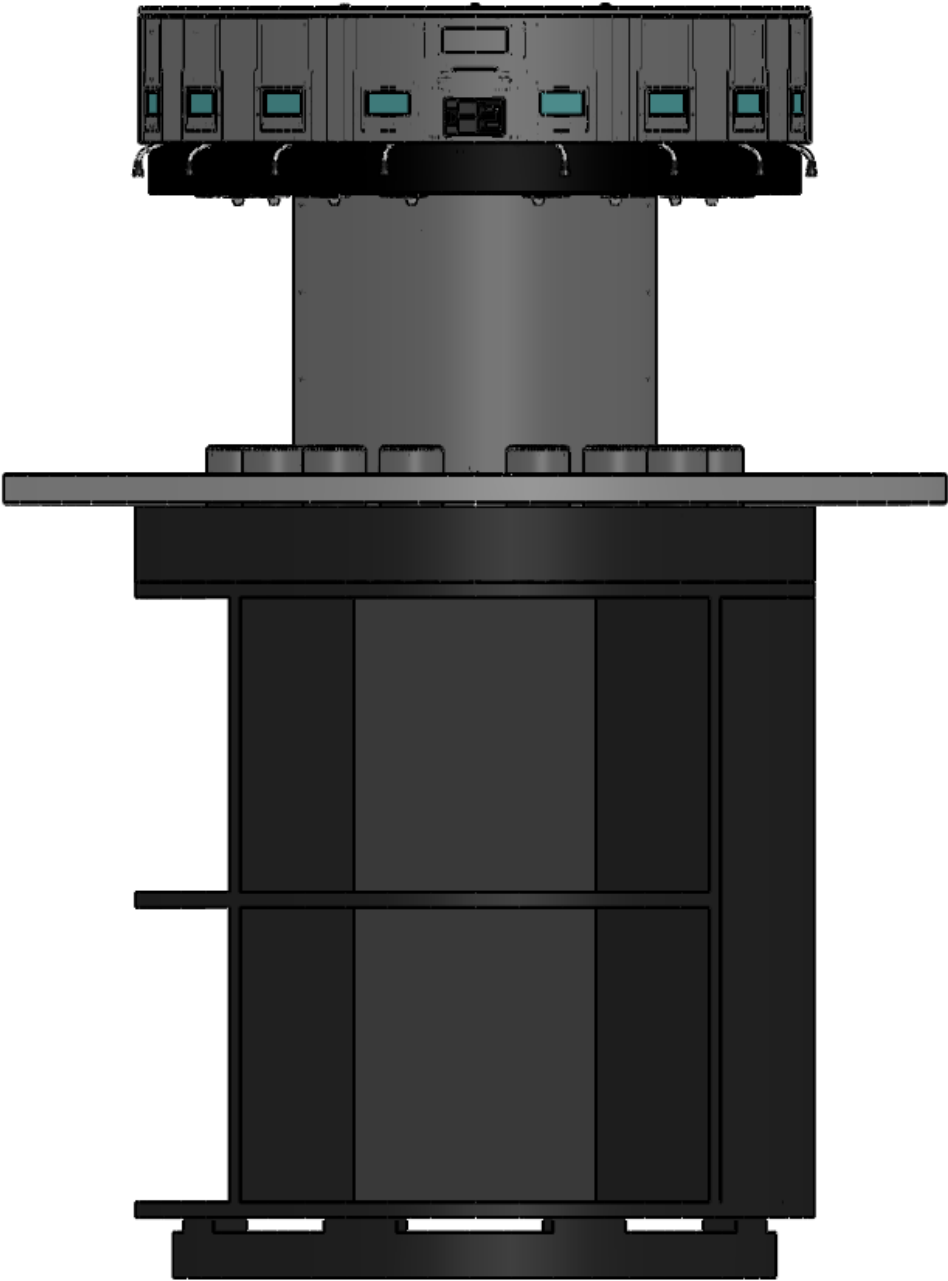

BASE CABINET
NOT INCLUDED

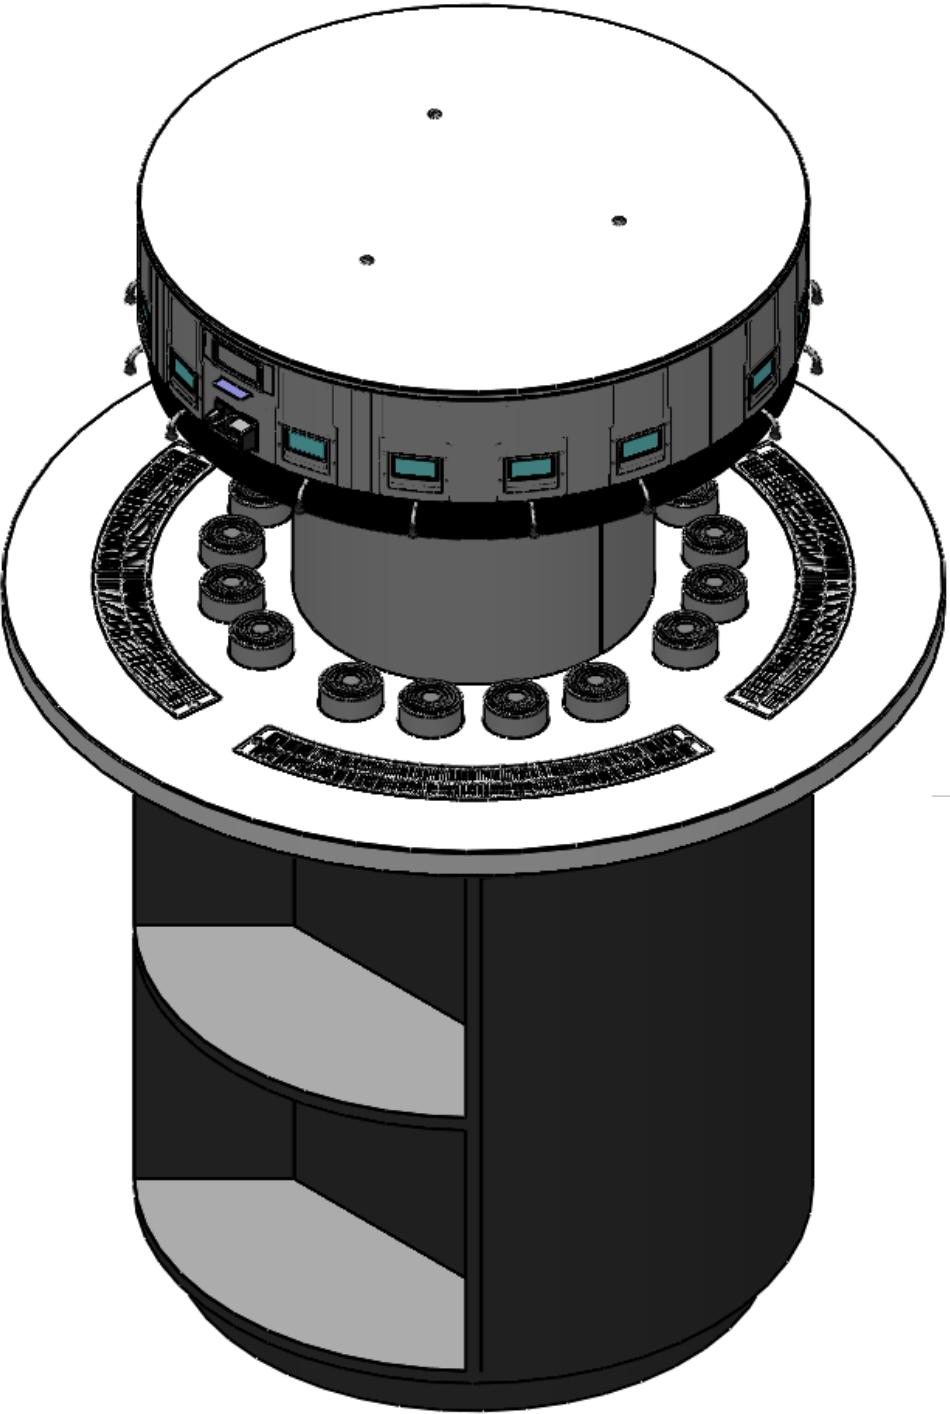

ENOROUND 16 BOTTLE ELITE
8+8

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
<INSERT COMPANY NAME HERE>. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
<INSERT COMPANY NAME HERE> IS
PROHIBITED.

REV.	DESCRIPTION	DATE	EXECUTOR	CHK'D	APPV'D
CODE:	MATERIAL:			MATERIAL CODE:	WEIGHT Kg:
-----	---				---

TITLE:	DWG NO.	A3
ER2-YMOTA	SCALE:1:10	LANGUAGE: ENGLISH
FINISH:	THICKNESS:	SHEET 9 OF 9